


# IRIECON

*Get Lit!*

## Install Guide for Dodge Ram tail lights, part 264236 Series

1. Remove the OEM tail light and leave all wiring intact. The OEM wire harness will be connected to your tail light as shown in the picture below.

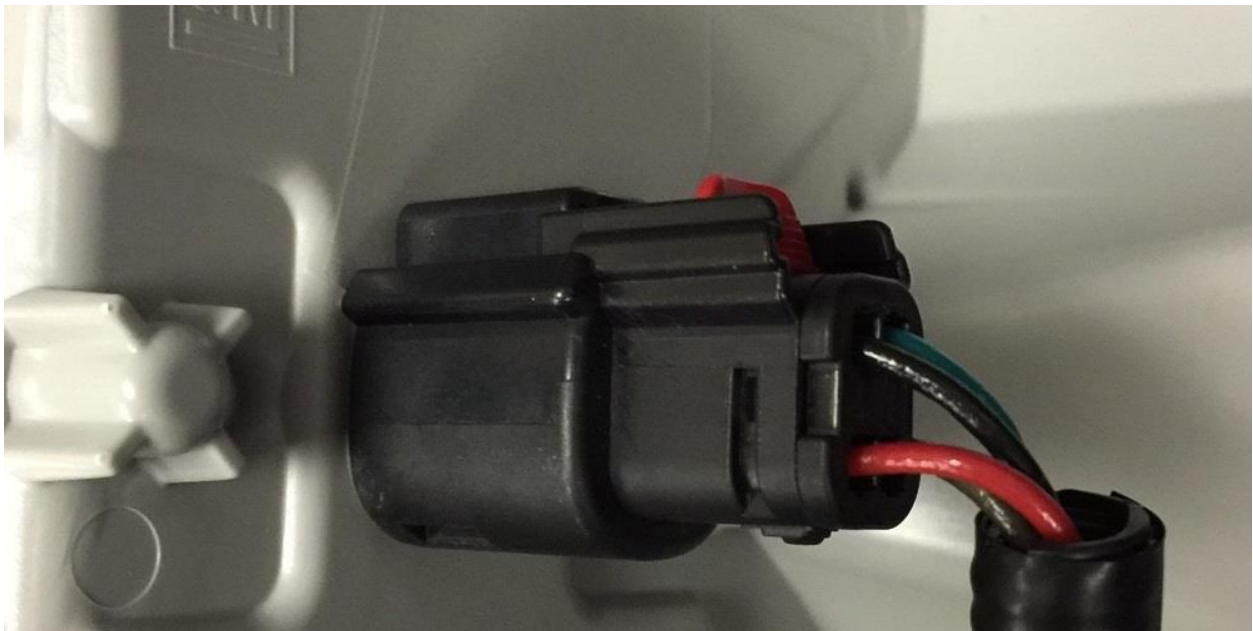

2. Remove the plug from the back of your OEM tail light as show in the picture below.



3. Connect the harness from the RECON tail light directly into the plug that is shown above.

*Thank you for purchasing from RECON Truck Accessories.*

[www.gorecon.com](http://www.gorecon.com)